

Assembly Instructions for the

MagiGriddle Option

on MagiCater and MagiKitch'n products

Retain this Manual for future reference

509 Route 3A Bow, NH 03304 Voice (603) 225-6684 Toll Free (800) 258-3708 FAX (603) 225-8472 WWW.MAGIKITCHN.COM


Magigriddle Assembly Instructions


For RMB, SMB and 600 Series grill models: Refer to the drawing on page 2 when following these assembly instructions for your new Magigriddle. The griddle must be cool in order to work on it. Take the two long bolts (3-1/2 inch) and thread a nut onto each to about an inch from the end, and then place a lockwasher on each bolt. Thread these long bolt assemblies into the rear bolt holes of the griddle, but don't tighten them yet. There are some initial bolt adjustments shown on the drawing. Take two of the short (2 inch) bolts and place one lockwasher only on each, then thread them all the way into the front bolt holes of the griddle. The top (broiling) grid must be removed first before the Magigriddle will fit. Place the Magigriddle onto the COLD grill and place a torpedo level or short carpenter's level on the griddle surface. Adjust the long rear bolts until the griddle is perfectly level from front to back and from side to side (so that grease won't puddle at the back and cooking liquids won't spill over the front edge). When the adjustment is correct, remove the Magigriddle without disturbing the bolt adjustments and set it down. While holding the rear bolts with a wrench, tighten the jam nut and lockwasher to lock the adjustment in place. Place the Magigriddle onto the cold grill and pull it forward so it's against the front grid hooks. The open space at the back allows flue gases to escape.

For RMB-APM and SMB-APM models: Refer to the drawing on page 2 when following these assembly instructions for your new Magigriddle. The griddle must be cool in order to work on it. Take two of the short (2 inch) bolts and thread a nut and then a lockwasher onto each. Thread these two bolts into the rear bolt holes of the Magigriddle so that the head of the adjusting bolt is about even with the bottom of the griddle (as shown on the drawing). Take the two remaining short bolts and thread them into the front bolt holes without any nut or lockwasher. The top (broiling) grid must be removed first before the Magigriddle will fit. Place the Magigriddle onto the COLD grill and place a torpedo level or short carpenter's level on the griddle surface. Adjust the long rear bolts until the griddle is perfectly level from front to back and from side to side (so that grease won't puddle at the back and cooking liquids won't spill over the front edge). When the adjustment is correct, remove the Magigriddle without disturbing the bolt adjustments and set it down. While holding the rear bolts with a wrench, tighten the jam nut and lockwasher to lock the adjustment in place. Place the Magigriddle onto the cold grill and pull it forward so it's against the front grid hooks. The open space at the back allows flue gases to escape.

Cleaning and Seasoning: Your new MagiGriddle is preserved with pure soybean oil shortening and wrapped in heavy plastic after manufacture. After removing all of the plastic wrapping, there are two popular methods to remove the preservative shortening. One method is to wash the griddle down with hot water and dishwashing detergent, rinse thoroughly in hot water and then dry the griddle immediately to avoid rust spots. The second method is to cook the shortening off on the charbroiler. When all the shortening is gone, the griddle should be allowed to cool to a temperature where it can be safely wiped down with a wet cloth or sponge until clean.

Lastly, you'll want to season the griddle as you would a good iron skillet or conventional griddle. The griddle is ready to begin cooking.

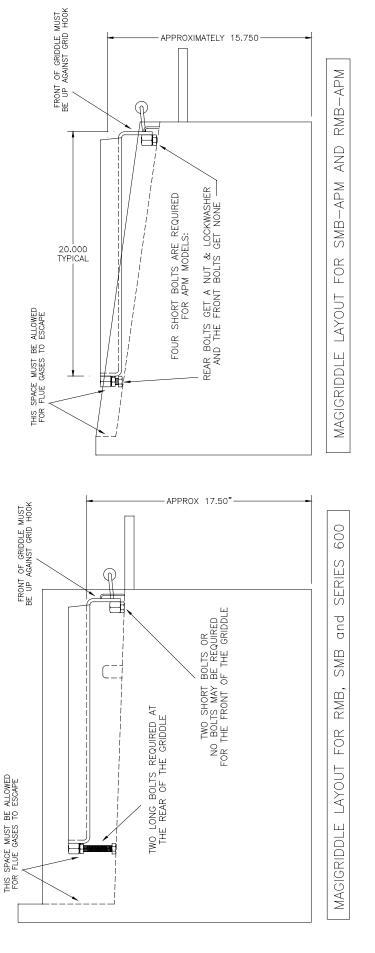

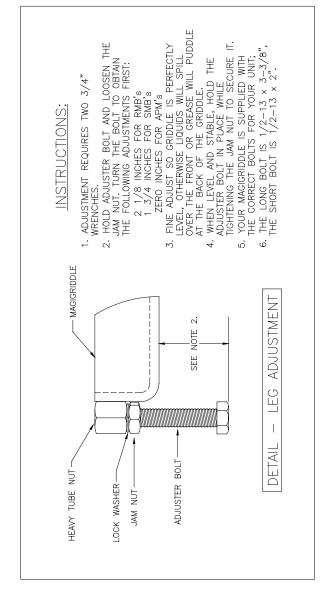

08656-E1.WMF



509 Route 3A Bow, NH 03304 Voice (603) 225-6684 Toll Free (800) 258-3708 FAX (603) 225-8472 WWW.MAGIKITCHN.COM